


THERMAL MOTOR PUMP Type MPT

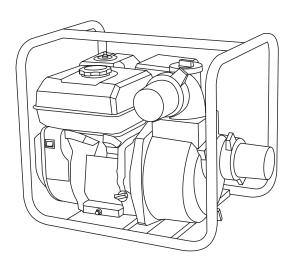

Owner's manual



PREFACE

Thank you for choosing a water pump of our company.

Please keep the owner's manual for reference.

This manual should be considered a permanent part of the water pump and should remain with the water pump if it is resold.

The manual instructs the user how to operate the water pump including the models of 1",1.5", 2", 3", and 4", and be sure to read it carefully first before operation to get the best results. If a problem should arise or if you have any questions about the pump, consult an authorized dealer of our company.

All information and diagrams of this manual are provided in accordance with the newest products at the publishing time. If revision or any other change is made in respect of the information descried in this manual, making it a little different from the product's actual status, our company will explain it. Our company reserves the right to make changes at any time without notice and without incurring any obligation. No part of this publication may be reproduced without written permission of our company.



CONTENTS

| 1. SAFETY | 3 |
|-----------------------------|--------|
| 2. LABEL | 7 |
| 3. COMPONENT IDENTIFICATION | 9 |
| 4. CONTROL SYSTEM | 16 |
| 5. PRE-OPERATION INSPECTION | 19 |
| 6. OPERATION | 24 |
| 7. STARTING THE ENGINE | 29 |
| 8. STOPPING THE ENGINE | 32 |
| 9. MAINTENANCE | 34 |
| 10. STORAGE | 39 |
| 11. TROUBLESHOOTING | 41 |
| 12. ELECTRIC DIAGRAM | 43 |
| 13 SPECIFICATION | 11 |



1. SAFETY

Our company's water pump is designed to give safe and reliable service if operated according to instructions. Read and understand the Owner's Manual before operating the water pump. Failure to do so could result in personal injury or equipment damage.

Safety Messages

Your safety and the safety of others are very important. We have provided important safety messages in this manual and on water pump and engine. Please read these messages carefully.

Safety label - on the water pump and engine.

A safety message - alerts you to potential hazards that could hurt you or others. Each safety message is preceded by a safety alert symbol <u>1</u> and one of three words: WARNING, CAUTION, or NOTICE. These mean:

A WARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

ACAUTAION

You CAN be HURT if you don't follow instructions.

NOTICE

Your water pump or other property could be damaged if you don't follow instructions.

1) Safety Instruction

Clean water pump and high pressure pump are only designed for pumping clean water.

Sewage pump has the apability of transmiting soft solids within the diameter of 25.4mm

Chemical pumps is used for transmission of weak acid and base (PH4-11), high ignition temperature liquid and sea water.

Mud pump is suitable for pumping dirt water with up to 50% solid sewerge, Capactiy up to diameter of 25.4mm.

To prevent fire hazards and to provide adequate ventilation, keep the pump at least 1 meter away from each of the building walls and other equipment during operation. Do not place flammable objects close to the pump and do not fill the fuel tank with gasoline before long distance transportation.

The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot. Let the engine cool before storing the water pump indoors.

Gasoline is highly flammable and explosive. Don't smoke in the refueling and fuel storage area.

Place the pump on a firm, level surface. If the pump is tilted or overturned, fuel spillage may result.

Refuel in a well-ventilated area with the engine stopped, and in places for refueling or storing gasoline. If spilling occurs, immediately clean it. After refueling, cover the fuel tank well and screw it down.

Exhaust contains poisonous carbon monoxide gas that can build up to dangerous levels in closed areas. Breathing carbon monoxide can cause unconsciousness or death.


Don't screw off the plug while the engine is running to avoid damaging




the equipment and hurting the persons.

Children and pets must be kept away from the area of operation due to a possibility of burns from the hot engine components.

The machine is forbidden to be operated in a potentially explosive atmosphere.

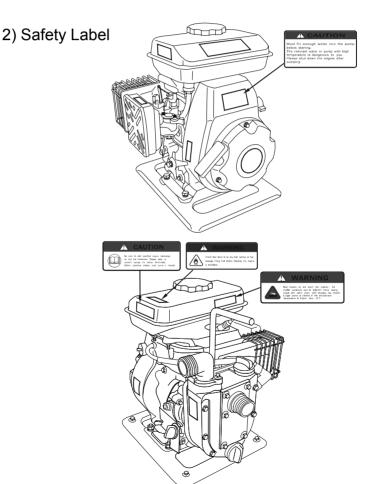


SAFETY

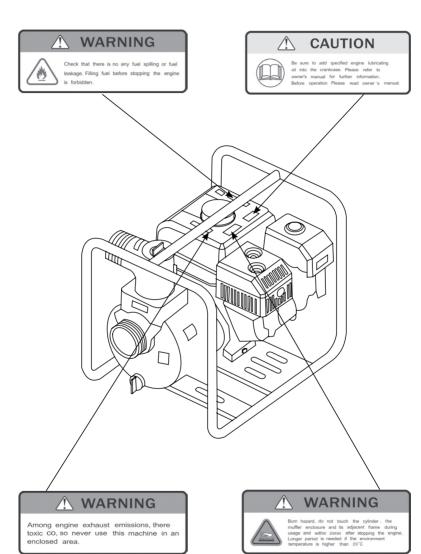





2. LABEL

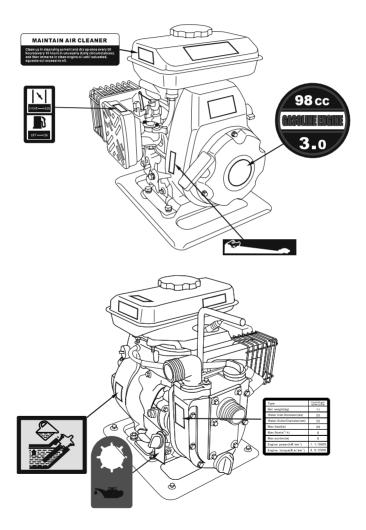




LABEL

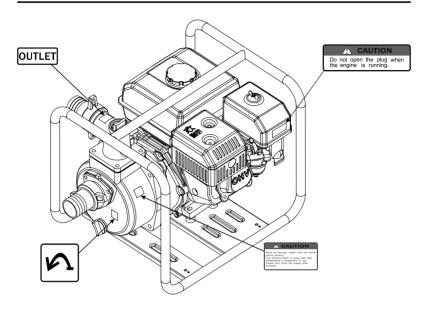


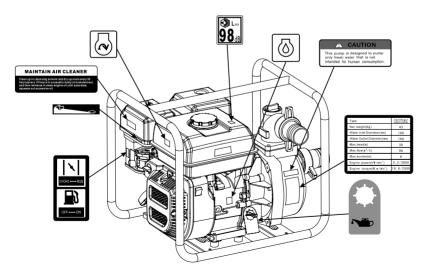




1" CLEAN WATER PUMP

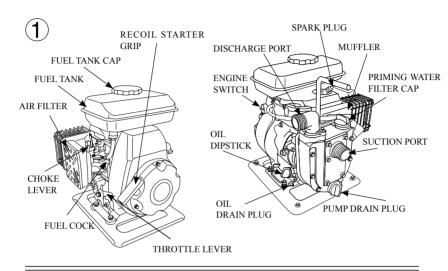


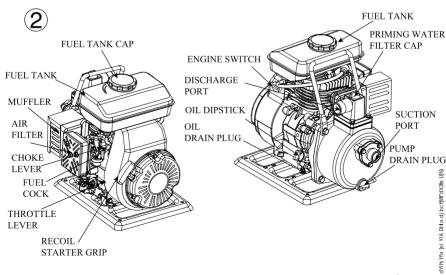




15" CLEAN WATER PUMP

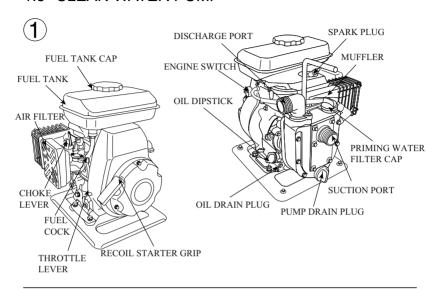

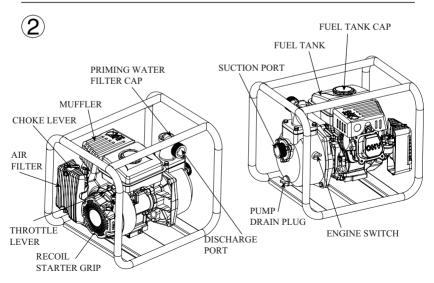





2"/3"/4" CLEAN WATER PUMP

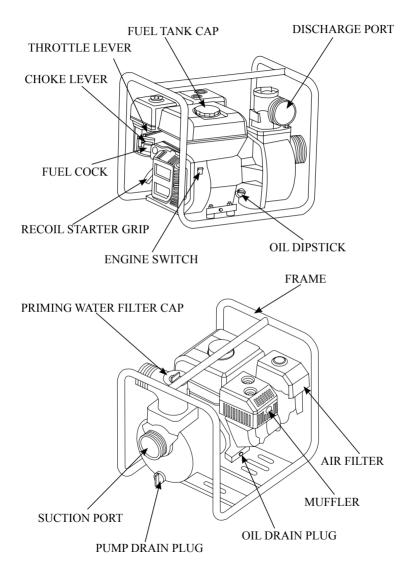

CHEMICAL PUMP

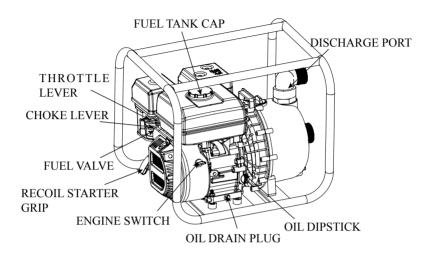


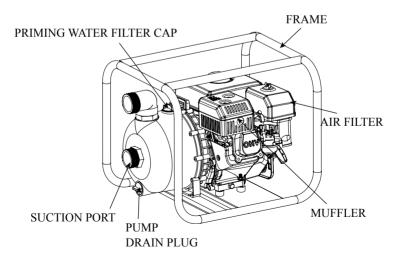








HIGH PRESSURE PUMP(The illustrations employ the 2" high pressure pump as the example)

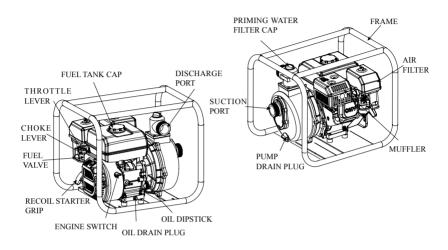


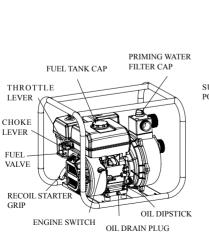

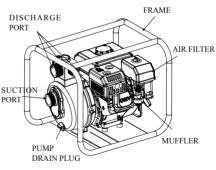


SEWAGE PUMP

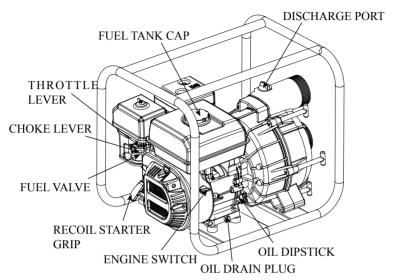


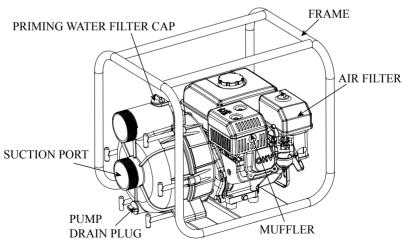



MUD PUMP

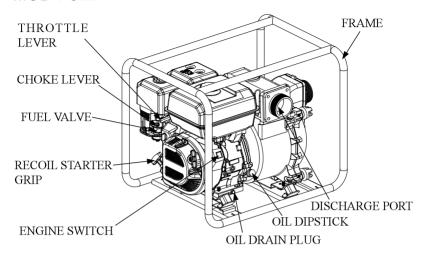

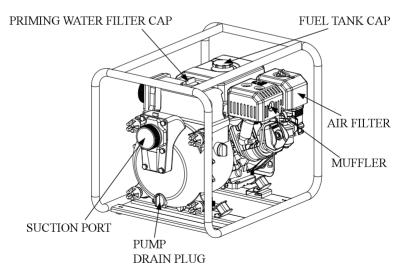


4. CONTROL SYSTEM

Before operating our company's water pump, carefully read and understand the owner's manual and be familiar with each control function. Know how to operate and how to do in a urgency condition.

1) Fuel Lever

The fuel lever is used for fuel flowing from the fuel tank to carburetor. Set the fuel lever to the "OPEN" position.


When not operating the engine, set the fuel lever to the "CLOSE" position.

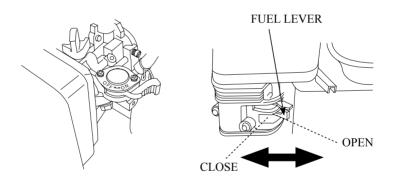

2) Engine Switch

The engine switch is used for opening or closing ignition circuit: Set the engine switch to the "OPEN" position to run the engine, and set it to the "CLOSE" position to stop the engine.




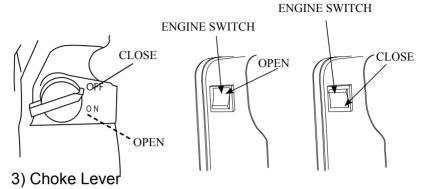

The choke lever is used for opening and closing the choke of the carburetor.

Set the choke lever to the "CLOSE" position for cold starting.

Set the choke lever to the "OPEN" position for normal operation or the Engine's warm starting.

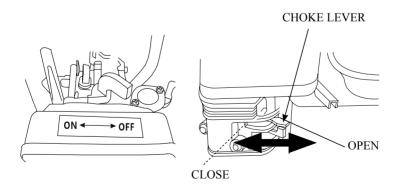




CONTROL SYSTEM

4) Throttle Lever

Adjust the throttle lever to change speed of the engine, thereby adjust the discharge water. For a bigger water discharge, set the throttle lever to the HIGH position, for a smaller water discharge, set the throttle lever to the LOW position.

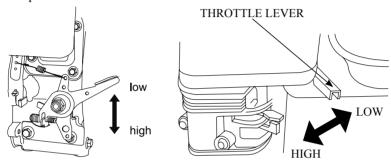


5) Recoil Starter

Pull the recoil starter to start the engine.

NOTICE

Don't allow the starter grip to snap back against the engine. Return it gently to prevent damage to the starter

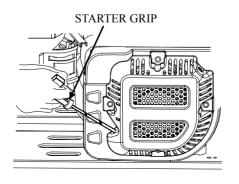



5. PRE-OPERATION INSPECTION

For your safety and to maximize the service life of your equipment, it is very important to take a few moments before you operate the pump to check its condition. Be sure to take care of any problem you find or have your servicing dealer correct it, before you operate the pump.

WARNING

Improperly maintaining this pump or failing to correct problems before operation could cause a malfunction in which you could be seriously injured.

Exhaust gas contains poisonous carbon monoxide. Avoid inhalation of exhaust gas. Never run the engine in a closed garage or an enclosed area. To prevent fire hazards, keep the pump at least 1m away from each of the building walls and other equipment during operation. Do not place

Before beginning your pre-operation checks, be sure the pump is on a level surface and the ignition switch is in the OFF position.

1) Routine Check

flammable objects close to the engine.

Look around and underneath the pump for signs of oil or gasoline leaks.

Remove any excessive dirt or debris, especially from around the engine muffler and recoil starter.

Look for signs of damage.

Check to confirm that all nuts, bolts, screws, hose connectors and clamps are tightened.

PRE-OPERATION INSPECTION

2) Check The Suction And Discharge Hoses

Check the general condition of the hoses. Be sure the hoses are in serviceable condition before connecting them to the pump. Remember that the suction hose must be of a reinforced construction to prevent hose collapse.

Check to ensure that the sealing washer in the suction hose connector is in a good condition.

Check to ensure that the hose connectors and clamps are securely installed.

Check to ensure that the strainer is in a good condition and is installed on the suction hose.


3) Check Engine Oil

NOTICE

Put the engine on a level place and check the engine oil.

- 1) Remove the oil filler cap and wipe the dipstick clean.
- Check the oil level by inserting the dipstick into the filler neck without screwing it in.
- If the level is low, add the recommended oil to the upper mark on the dipstick.
- 4) After adding, don't forget to refit and screw down the oil dipstick.



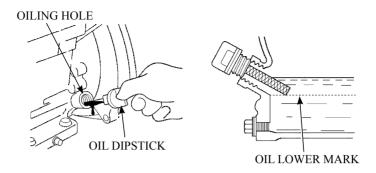


NOTICE

Engine operating with oil at the lower oil mark will cause engine damage.

4) Check Air Filter

A dirty air filter will restrict air flow to the carburetor, reduce engine performance and thereby reduce water Pump performance. So, often check the air filter.

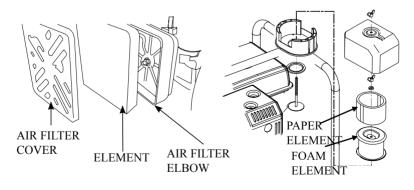

Screw off butterfly nut and remove air filter housing, If the element is

PRE-OPERATION INSPECTION

dirt, clean it, if it is damaged, replace with a new one. If it is an oil bath air filter, Check the oil capacity.

Reinstall the air filter back in reverse order and screw the butterfly nut down.

NOTICE


Assembly should be correct, Never run the water pump without the air filter or with a damaged air filter assembled, if so, rapid engine wear will result.

5) Check The Fuel

Before each operation, check the engine oil level with the water pump stopped on a level ground. Screw off the fuel tank cap and check the fuel level. If the level is too low, add fuel, screw on the fuel tank cap and tighten it after refueling.

NOTICE

Don't add the fuel over the fuel strainer shoulder(maximum level).

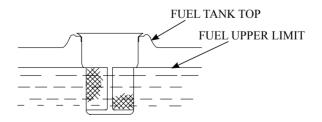



PRE-OPERATION INSPECTION

Refuel in a well-ventilated area. If the engine has run for a while, it has to be cooled before being refueled.

NOTICE

Fuel can damage paint and plastic. Be careful not to spill fuel when filling your fuel tank.

6) Fuel Recommendations

Use gasoline with octane rating \geq 90.

We recommend unleaded gasoline because it produces fewer engine deposit and spark plug deposit and extends exhaust system's life.

Never use stale or contaminated gasoline or oil/gasoline mixture. Avoid getting dirt or water in the fuel tank.

6. OPERATION

1) Safe Operating Precautions

To safely utilize the full potential of this pump, you need a complete understanding of its operation and a certain amount of practice with its controls.

Before operating the pump for the first time, please review the "Safety Instruction" (refer to page 4) and the "PRE-OPERATION INSPECTION".(refer to page 18)


Exhaust contains poisonous carbon monoxide gas that can build up to dangerous levels in closed areas. Breathing carbon monoxide can cause unconsciousness or death

2) Pump Placement

For best pump performance, place the pump near the water level, and use hoses that are no longer than necessary. That will enable the pump to produce the greatest output with the least self-priming time.


As head increases, pump output decreases, The length, type and size of the suction and discharge hoses can also significantly affect pump output. Minimizing suction head (placing the pump near the water level) is also very important for reducing self-priming time.



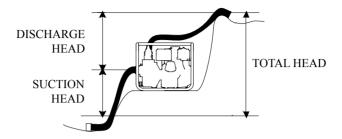

3) Suction Hose Installation

Use the commercially available hose and hose connector, and the hose clamp provided with the pump to install the suction, and tighten the clamp. Firmly fix the suction hose without moving.

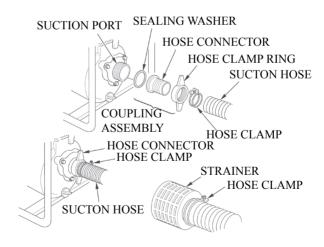

Hose dimension should be longer than water suction port dimension. Minimum hose dimension shall be as following:



OPERATION

| 1" water pump | 25mm |
|-----------------|-------|
| 1.5" water pump | 40mm |
| 2" water pump | 50 mm |
| 3" water pump | 80 mm |


4" water pump 100 mm

Use a hose clamp to securely fasten the hose connector to the suction in order to prevent air and water leakage. Check to ensure that the hose connector sealing washer is in a good condition.

Install the strainer (provided with the pump) on the other end of the suction hose and secure it with a hose clamp. The strainer will help prevent the pump from becoming clogged or damaged by debris.

4) Discharge Hose Installation

Use the commercially available hose and hose connector, and the hose clamp provided with the pump to install the discharge, and tighten the clamp. Firmly fix the discharge hose without moving.

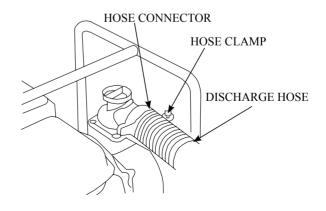



It is best to use a short, large-diameter hose, because that will reduce fluid friction and improve pump's output.


Tighten the hose clamp securely to prevent the discharge hose from disconnecting under a high pressure.

5) Priming The Pump

Before starting the engine, make sure to fill the pump with water: screw off the priming plug and prime the pump fully with clean water. Don't screw off the priming plug during operation of the pump to avoid damaging the equipment and injuring persons. Reinstall the priming plug and tighten it securely after priming.

NOTICE

Dry operating of the pump will destroy the pump seal. If the pump has been operated in a dry state, stop the engine immediately and allow the pump to cool before being primed.

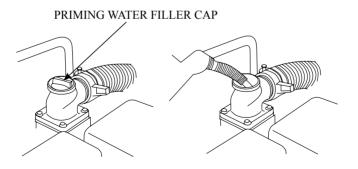



OPERATION

6) High Altitude Operation

At high altitude, the standard carburetor air-fuel mixture will be excessively rich. Output power will decrease, and fuel consumption will increase. Air-fuel mixture will also be very likely to make the spark plug dirty and make starting difficult.

Engine performance can be improved by installing a main fuel jet of a smaller diameter in the carburetor and readjusting the pilot screw. If you always operate the water pump at altitudes higher than 1,000 m above sea level, have our company's authorized dealer perform this carburetor modification.

Even with a suitable carburetor, engine horsepower will decrease approximately by 3.5% for each 300 meter increase in altitude. The effect of altitude on horsepower will be greater than this if no carburetor modification is made.


NOTICE

If a carburetor suitable to high altitude is equipped with an engine suitable to a lower altitude, the lean air fuel mixture will lead to lower engine output power, over-heating and serious damage.




7. STARTING THE ENGINE

- 1) Screw the priming plug off and prime the pump with water until the water is overflowing (water pump set shall be placed on a level ground).
- 2) Move the fuel valve lever to the "ON" position.

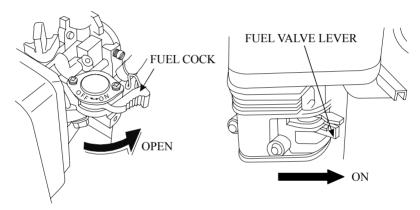


3) To start a cold engine, move the choke lever to the "CLOSED" position.

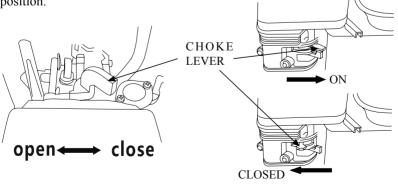


STARTING THE ENGINE

4) Move the throttle lever away from the "SLOW" position about 1/3 of the way toward the "FAST" position.

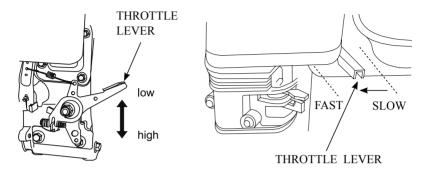

5) Turn the engine switch to the "ON" position.

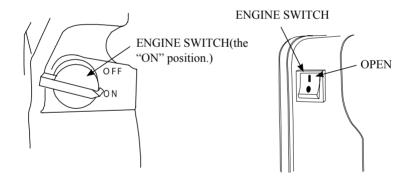


6) Pull the starter grip lightly until resistance is felt, the pull it briskly.


NOTICE

Do not allow the starter grip to snap back against the engine. Return it gently to prevent damage to the starter.



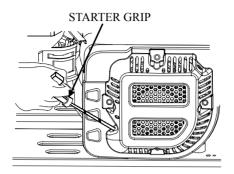

7) If the choke lever was moved to the CLOSED position to start the engine, gradually move it to the OPEN position as the engine warms up.

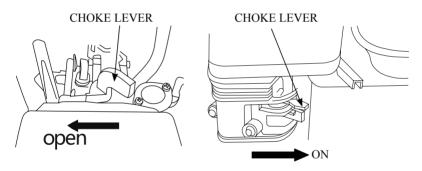

8) Setting engine speed

After starting the engine, move the throttle lever to the FAST position for self-priming, and check pump output.

Pump output is controlled by adjusting engine speed, moving the throttle lever in the FAST direction will increase pump output, and moving the throttle lever in the slow direction will decrease pump output.




8. STOPPING THE ENGINE


To stop the engine in an emergency, simply turn the engine switch to the OFF position.

Under normal conditions, use the following procedure:

1) Move the throttle lever to the SLOW position.

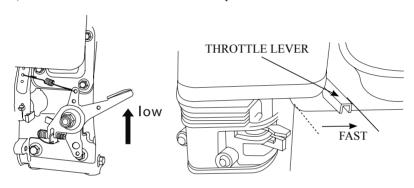


2) Turn off engine switch: Turn the engine switch to OFF position.

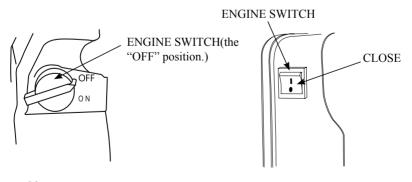



3). Turn fuel valve lever off: Turn the fuel valve lever to OFF position.

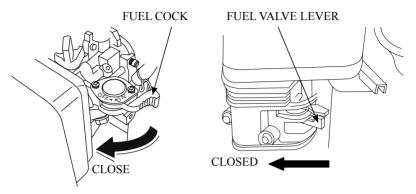

After use, remove the pump drain plug and drain the pump chamber. Remove the filler cap and flush the pump chamber with clean, fresh water. Allow the water to drain from the pump chamber, then reinstall the filler cap and drain plug.

9. MAINTENANCE

Good maintenance is essential for safe, economical, and trouble-free operation. It will also help reduce air pollution.

The maintenance schedule applies to normal operating conditions. If you operate your pump under severe conditions such as sustained high-load or high-temperature operation or use in unusually wet or dusty conditions, consult your servicing dealer for recommendations applicable to your individual needs and use.

1) Maintenance Schedule

| REGULAR SERV | VICE PERIOD | Each use | First month or 20 hrs. | Every 3 months or 50 hrs. | Every 6 months or 100 hrs. | Every year or 300 hrs. |
|---------------------------|-----------------|--------------------|------------------------------|---------------------------------|----------------------------------|------------------------|
| En sin s Oil | Check oil level | • | | | | |
| Engine Oil | Change | | • | | • | |
| A ' P'L | Check | • | | | | |
| Air Filter | Clean | | | •(1) | | |
| Sediment Cup | Clean | | | | • | |
| Spark Plug | Clean | | | | • | Change |
| Valve Clearance | Readjust | | | | | •(2) |
| Cylinder head | Wash | Every 300 hrs. (2) | | | | |
| Fuel Tank And Strainer | Wash | Every 2 years (2) | | | | |
| Fuel Tube | Change | Every 2 years (2) | | | | |
| Impeller | Check | | | | | •(2) |
| Impeller Clear- ance | Check | •(2) | | | | •(2) |

- (1) Service more frequently when the pump is used in dusty areas.
- (2) These items should be serviced by our company's authorized dealer.



M WARNING

Improper maintenance, or failure to correct a problem before operation, can cause a malfunction by which you can be seriously injured or killed. Always follow the inspection and maintenance recommendations and schedules in this owner's manual.


2) Engine oil change


Drain the used oil while the engine is warm. Warm oil drains quickly and completely.

- 1. Place a suitable container below the engine to catch the used oil, then remove the oil filler cap/dipstick and the drain plug.
- 2. Allow the used oil to drain completely, then reinstall the drain plug, and tighten it securely.

Please dispose of used motor oil in a manner that is unharmful to with the environment. We suggest you take used oil in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the trash, pour it in the ground, or down into a drain.

3. With the engine on a level place, fill it to the upper limit with the recommended oil.

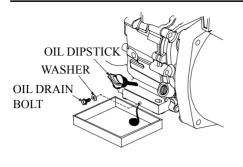

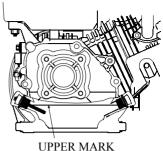

4. Reinstall the oil dipstick and tighten it.

A CAUTAION

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

3) Engine oil recommendations

Engine oil is a major factor affecting engine performance and service life. Non-detergent and 2-stroke engine oils will damage the engine and are not recommended.


Recommended oil

4-stroke gasoline oil

SE, SF grades under API service

Classification or SAE10W-30 that is equivalent SG grade. Of course, you can select according to local temperature.

The recommended operating range of this pump: -5° C to 40° C.

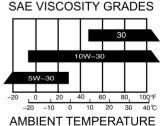



4) Air Filter Service

A dirty air filter element will restrict air flow to the carburetor, reducing engine performance, if you operate the pump in very dusty areas, clean the air filter more frequently than specified in the maintenance schedule.

NOTICE

Never run the engine without the air filter or use a damaged air filter. If so, rapid engine wear will result.

Screw off the butterfly nut down and remove the housing. Screw off the other butterfly nut and remove the element.

- 1. Wash the element with home detergents and warm water (or non-flammable or high flash-point cleansing solvents) and dry it up.
- 2. Soak it in clean engine oil until it is saturated. Squeeze out excess oil.
- 3. Clean the lower body of the air filter, housing, and rubber cushion. Prevent dusts from entering into the ail path of the carburetor.
- 4 Reinstall air filter and screw on the butterfly nut.

5) Spark Plug Service

Recommended spark plugs: NGK BP6ES or other equivalents.

NOTICE


Wrong model can result in engine damage.

- 1. Remove the spark plug cap, and clean any dirt from around the spark plug base.
- 2. Use the plug wrench to remove the spark plug.
- 3. Measure the plug gap with a feeler gauge. If the electrode or insulator

MAINTENANCE

is damaged, replace the spark plug.

Correct as necessary by carefully bending the side electrode. The gap should be: 0.70-0.80 mm.

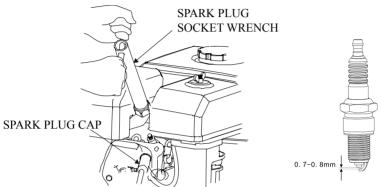

- 4. Check if the spark plug gasket is in good condition. In order to avoid damage to the thread in the cylinder head, screw in the spark plug carefully by hand.
- 5. Once the spark plug has touched the washer, screw it down by a spark plug wrench and compress the washer.
- -- If a new spark plug is used, make 1/2 turn more after compressing the gasket.
- -- If reinstalling the used spark plug, just make 1/8-1/4 turn more.
- 6. Install the spark plug cap.




10. STORAGE

 Remove priming plug and drain plug, flush the chamber with clean water, reinstall the priming plug and drain plug. After stopping the engine, cool for half an hour at least, then flush all outer surfaces and wipe it.

NOTICE

Higher pressure flushing water can enter into the air filter and muffler, even entering into the cylinder along the air path, resulting in corrosion and damage. So, operation must be performed only after stopping and cooling.

2) Remove drain plug of the carburetor and sediment cup, then open the fuel lever. Completely drain the fuel from the carburetor and fuel tank, then install the sediment cup and drain plug back and tighten them.

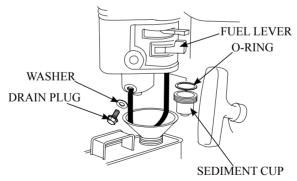

- 3) Change the engine oil.
- 4) Pour a tablespoon (5-10 cc) of clean engine oil into the cylinder. Crank the engine several revolutions to distribute oil in the cylinder. Reinstall the spark plug back.

STORAGE

- 5) Pull the starter grip slowly until resistance is felt. During such a process, intake and exhaust valves keep closed to restrict the moisture entering into cylinder head, then, return the starter grip gently.
- 6) Repair damaged enamel paint, and apply a thin film of grease to the areas likely to be rusty.
- 7) Cover a dust-proof sleeve on the water pump and place it in the ventilated area.



11. TROUBLESHOOTING

1) Engine

| ENGINE WILL NOT START | CAUSE | CORRECTION |
|---|--|--|
| | Fuel valve OFF. | Move fuel valve lever to ON position. |
| Check Control Parts | Choke open. | Move choke lever to CLOSED position unless engine is warm. |
| | Engine switch OFF. | Turn engine switch to ON. |
| | Out of fuel. | Refuel. |
| Check Fuel Bad fuel, pump stored without treating or draining gasoline or refueling with bad gasoline. | | Drain fuel tank and carburetor, refuel with fresh gasoline. |
| Pamaya And Inspect | Spark plug faulty fouled or improperly gapped. | Adjust gap or replace with a new spark Plug |
| Remove And Inspect Spark Plug Spark plug wet with fuel(floor engine). | | Dry and reinstall spark plug, start engine with throttle lever in FAST position. |
| Contact Our Company's Authorized Dealer For Servicing | 00 / | Replace or repair. |

| ENGINE LACKS POWER | CAUSE | CORRECTON |
|--------------------------|---|---|
| Check Air Filter Element | Element clogged. | Clean or replace the element. |
| Check Fuel | Bad fuel. | Drain fuel tank and carburetor, refuel with fresh gasoline. |
| pany's Authorized | Fuel filter clogged, carburetor malfunction, ignition malfunction, valves stuck, etc. | Replace or repair. |



TROUBLESHOOTING


2) Water pump

| NO PUMP OUTPUT | CAUSE | CORRECTION | | |
|------------------------------------|-------------------------------------|---|--|--|
| Check pump chamber | Pump not primed. | Prime pump. | | |
| | Hose collapsed, cut or punctured. | Replace hose. | | |
| | Strainer not completely underwater. | Sink the strainer and the end of a suction hose completely underwater. | | |
| Check suction hose | Air leak at connector. | Replace sealing washer if it is missing or damaged. Tighten hose connector and clamp. | | |
| | Strainer clogged. | Clean debris from strainer. | | |
| Measure suction and discharge head | Excessive head. | Relocate pump and hoses to reduce head. | | |
| Check engine | Engine lacks power. | See "engine lacks power" | | |

| LOW PUMP OUTPUT | CAUSE | CORRECTION | |
|---------------------------------------|--|---|--|
| | Hose collapsed, cut or damaged, too long, or diameter too small. | I . | |
| Check Suction Hose | Strainer not completely underwater. | Sink the strainer and the end of a suction hose completely underwater. | |
| | Air leak at connector. | Replace sealing washer if it is missing or damaged. Tighten hose connector and clamp. | |
| Check Discharge Hose | Hose damaged, too long, or diameter too small. | Replace discharge hose. | |
| Measure Suction And Discharge Head | Critical head. | Relocate pump and hoses to reduce head. | |
| Check Engine | Engine lacks power. | See "engine lacks power" | |



12. ELECTRIC DIAGRAM

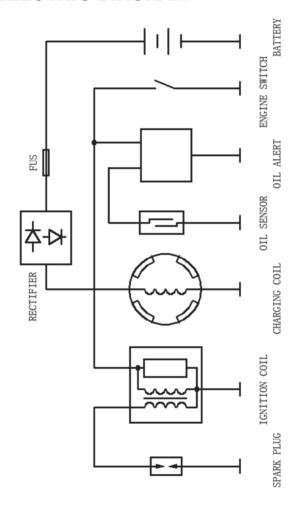



SPECIFICATION

13. SPECIFICATION

| ITEM | MODEL | 1"clean water pump (1) | 1"clean water pump (2) | 1.5"clean water pump (1) | 1.5"clean water pump (2) | 2" clean water pump | 3" clean water pump |
|------------|--------------------------------------|---|------------------------------|--------------------------------|--------------------------------|-------------------------------|------------------------|
| | Length (mm) | 335 | 385 | 335 | 465 | 477 | 500 |
| | Width (mm) | 285 | 285 | 285 | 380 | 395 | 395 |
| | Height (mm) | 380 | 375 | 380 | 405 | 411 | 446 |
| | Dry Weight (kg) | 11 | 11 | 12 | 19.5 | 26.5 | 29 |
| - Jumb | Suction Port Diameter | 25 mm (1 in) | 25mm (1 in) | 40mm (1.5 in) | 40mm (1.5 in) | 50 mm (2 in) | 80 mm (3 in) |
| Water Pump | Discharge Port Diam- eter | 25 mm (1 in) | 25mm (1 in) | 40mm (1.5 in) | 40mm (1.5 in) | 50 mm (2 in) | 80 mm (3 in) |
| = | Suction Head (maximum) (m) | 4 | 6 | 6 | 6 | 8 | 8 |
| | Total Head (maximum) (m) | , | 20 | 16 | 20 | 25 | 26 |
| | Discharge Capacity (maximum) (m³/h) | 4 | 8 | 14 | 16 | 36 | 60 |
| | Description | | RS100 | | R100 | R2 | 200 |
| l a | Туре | Air-cooled, 4-Stroke, SV, single cylinder, EPA approval | | | | , 4-Stroke, O der,EPA appı | |
| Engine | Displacement (cc) | 97.7 | | | 98 | 19 | 96 |
| 띱 | Power (kW/3600rpm) | 1 | | | 1.8 | 3 | .6 |
| | Fuel Tank Capacity (L) | 1.5 | | | 2 | 3 | .6 |
| | Engine Oil Capacity(L) | | 0.3 | | 0.35 | 0 | .5 |

| | | 4" clean | 1.5# high | 1.5# high | 2# high | 2# high |
|----------------|---|------------------|------------------------------------|---------------|------------------------------------|----------------------------------|
| ITEM | MODEL | water pump | pressure pump (single-impeller) | | pressure pump (single-impeller) | pressure pump (twin-impeller) |
| | Length (mm) | 610 | 500 | 500 | 500 | 500 |
| | Width (mm) | 430 | 395 | 395 | 395 | 395 |
| | Height (mm) | 537 | 446 | 446 | 446 | 446 |
| | Dry Weight (kg) | 45 | 27 | 27.5 | 29 | 29.5 |
| dum | Suction Port Diameter | 100 mm (4 in) | 40 | 40 | 50 | 50 |
| Water Pump | Discharge Port Diam- eter | 100 mm (4 in) | 40 (40/25/25) | 40 (40/25/25) | 50 (50/40/40) | 50 (50/40/40) |
| M _a | Suction Head (maximum) (m) | 8 | 7 | 7 | 7 | 7 |
| | Total Head (maximum) (m) | 30 | 50 | 80 | 50 | 80 |
| | Discharge Capacity (maximum) (m3/h) | 96 | 20 | 12 | 30 | 16 |



SPECIFICATION

| | Description | R270 | R200 | R210 | | |
|----------------|------------------------|--|------|------|--|--|
| ره ا | Туре | Air-cooled, 4-Stroke, OHV, single cylinder, EPA approval | | | | |
| Engine | Displacement (cc) | 270 | 196 | 212 | | |
| [2 | Power (kW/3600rpm) | 5.2 | 3.6 | 3.8 | | |
| | Fuel Tank Capacity (L) | 6.7 | 3.6 | 3.6 | | |
| | Engine Oil Capacity(L) | 1.1 | 0.5 | 0.6 | | |

| ITEM | MODEL | 2# high pressure pump | 2# chemical pump | 3# sewage pump | 3#mud pump | |
|------------|--------------------------------------|---|---------------------|-------------------|------------|---|
| | Length (mm) | 610 | 500 | 552 | 688 | _ |
| | Width (mm) | 445 | 395 | 432 | 528 | |
| | Height (mm) | 537 | 446 | 460 | 572 | _ |
| | Dry Weight (kg) | 64 | 27 | 33 | 64 | |
| l dui | Suction Port Diameter | 50 | 50 | 80 | 80 | |
| Water Pump | Discharge Port Diam- eter | 50 | 50 | 80 | 80 | |
| Wa | Suction Head (maximum) (m) | / | 7 | 7 | 7 | |
| | Total Head (maximum) (m) | 90 | 35 | 26 | 20 | |
| | Discharge Capacity (maximum) (m3/h) | 30 | 32 | 60 | 60 | |
| | Description | R390 | R2 | 10 | R270 | |
| o o | Туре | Air-cooled, 4-Stroke, OHV, single cylinder,EPA approval | | | | |
| Engine | Displacement (cc) | 389 | 21 | 2 | 270 | - |
| <u>H</u> | Power (kW/3600rpm) | 7.2 | 3. | 8 | 5.2 | |
| | Fuel Tank Capacity (L) | 6.7 | 3. | 6 | 6.7 | |
| | Engine Oil Capacity(L) | 1.1 | 0. | 6 | 1.1 | |

Noise emission is measured according to EN ISO 3744 and European Directive 2005/88/EC (revision of 2000/14/EC European Directive)

| MODEL | 1"/1.5"/2"/3" water pump | 4" water pump |
|-----------------|--------------------------|---------------|
| Sound Power(dB) | 98 | 100 |

ADJUSTING PARAMETER

| Spark Plug Gap | 0.70-0.80 mm |
|--------------------------|--|
| Engine Idle Speed | $1600{\pm}160~\mathrm{rpm}$ |
| Valve Clearance (Cooled) | Intake valve: 0.10-0.15 mm Exhaust valve: 0.15- 0.20 mm |